INSTALLATION INSTRUCTIONS

Product	**Date**	**Form #**
7160-0126 PENTAX PRINTER MOUNT	3-31-08	INST-388

Mounting the Pentax Printer Mount to a Gamber-Johnson DS-74 mounting bracket:

1. Attach the printer mount to a DS-74 with the #10-32unc x 3/8" long screws and split lock washers provided in hardware bag 7120-0427. There are multiple hole locations on the bottom of the printer mount and in the DS-74 mounting bracket, so use the holes that will best locate the printer mount for your specific application.

2. The printer mount comes with a cable strain relief bracket located in the hardware bag. If your specific application has room to mount the strain relief bracket, you can do so with the #6-32unc x 1/4" nylon patch screws found in the hardware bag.

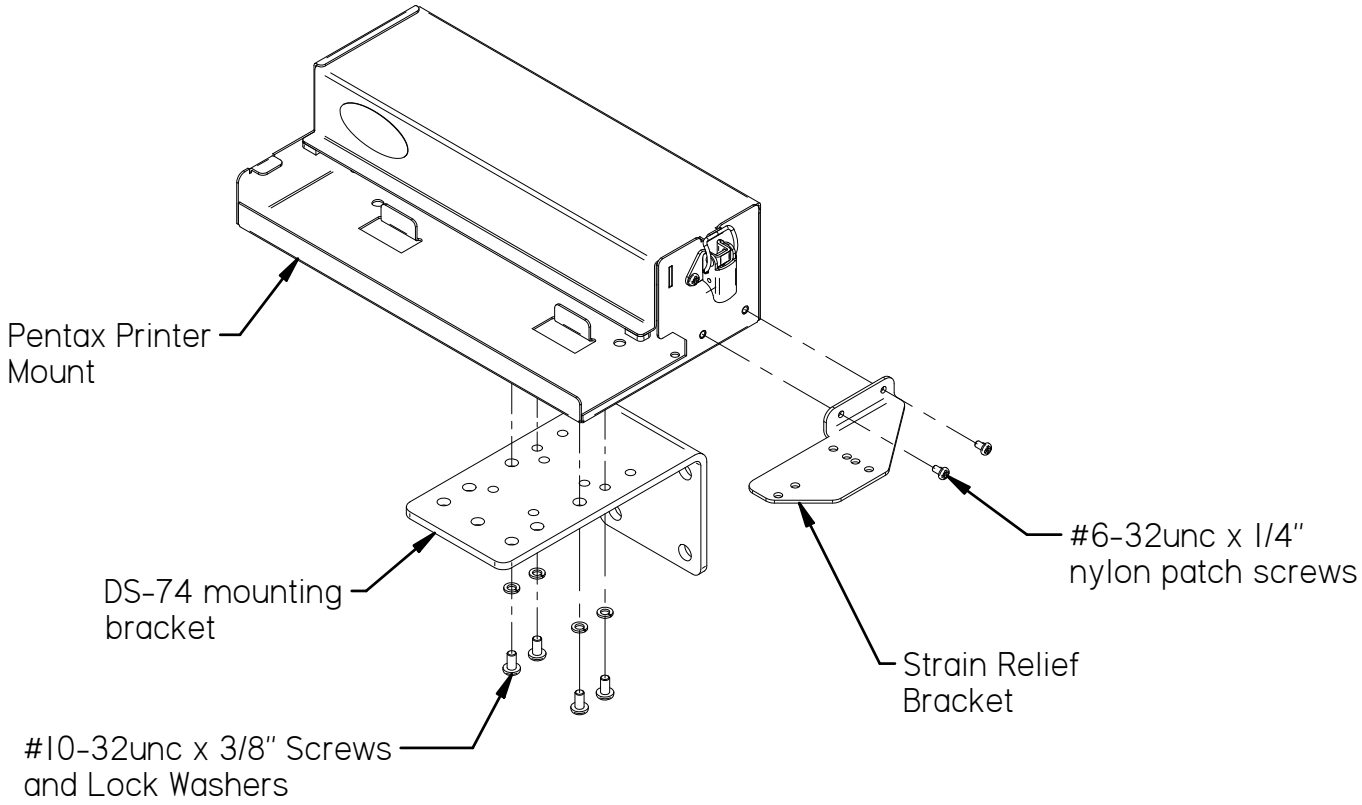
Pentax Printer Mount
DS-74 mounting bracket
#10-32unc x 3/8" Screws and Lock Washers
#6-32unc x 1/4" nylon patch screws
Strain Relief Bracket

Product Mounting Disclaimer
Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

Installing the Pentax Printer:

1. Insert the paper roll spindle into the paper roll then place the roll into the printer mount. The paper should roll off the top of the roll toward the printer. See figures 1 & 2

2. Plug the wires into the Pentax printer and insert into the mount. The left side of the printer slides under the tab on the left side of the mount. The printer will then nest inside the formed flanges on the mount base. The top cover will hold the printer in place. See figures 3 & 4

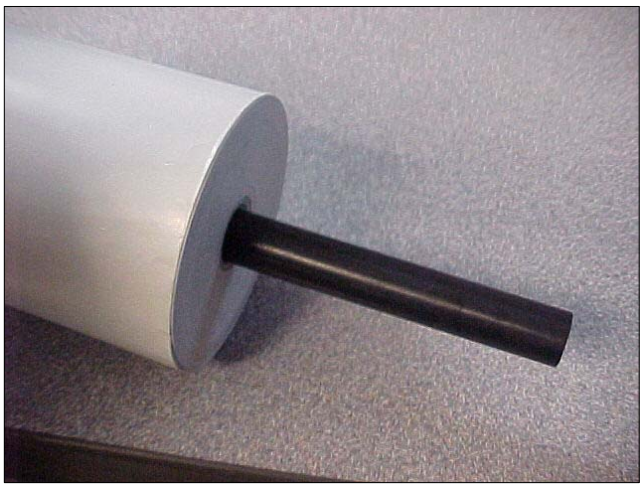

FIGURE 1.

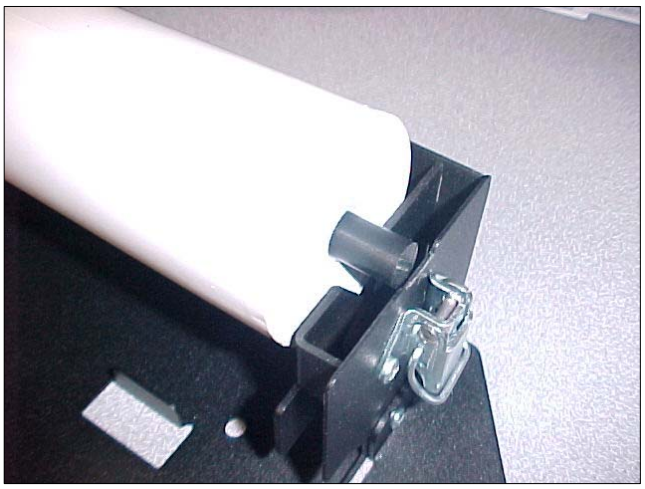

FIGURE 2.

FIGURE 3.

FIGURE 4.